


# WIRING DIAGRAM

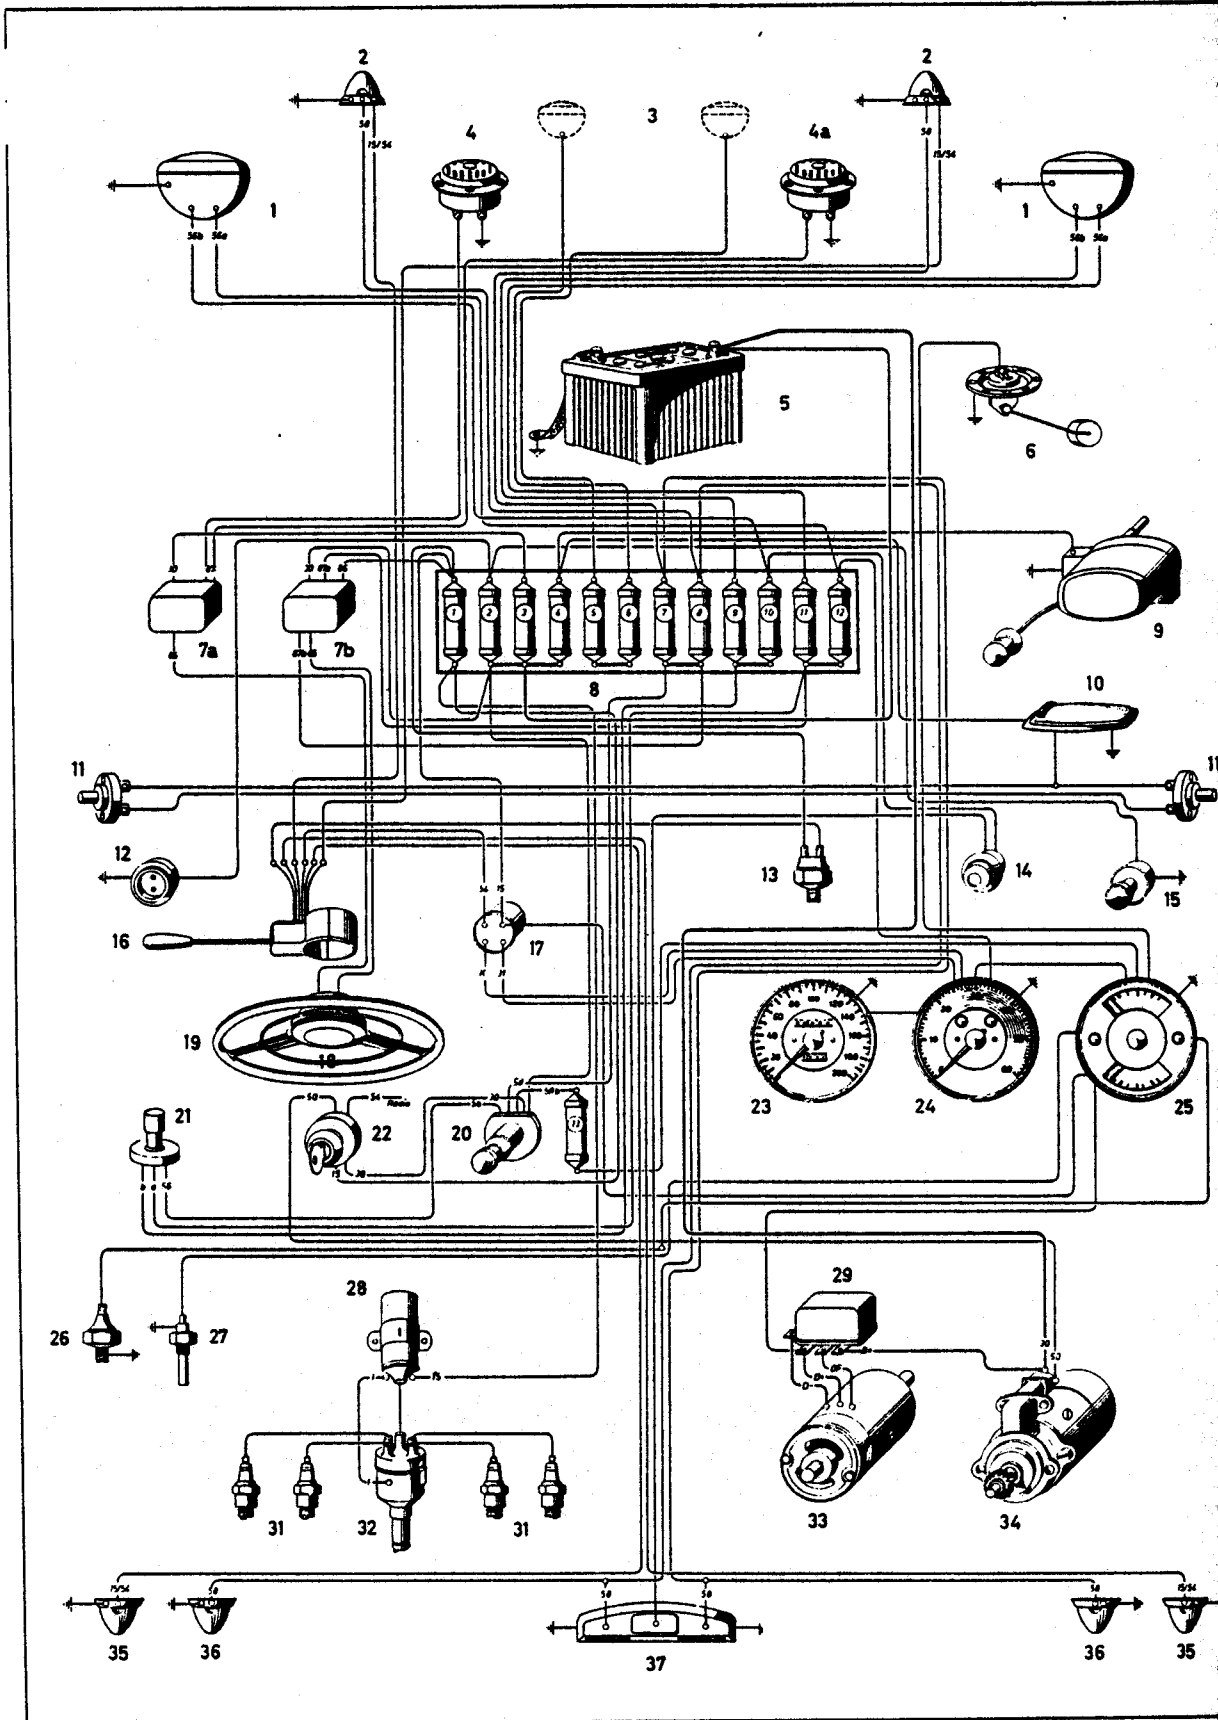

## Electrical System Type 356A

Description	Required Bulbs
1 High beam	6 V — 35/35 W
2 Parking blinker light	6 V — 15/5 W
3 Fog light (optional)	
4 Signal horn (high tone)	
4 a Signal horn (low tone)	
5 Battery	
6 Fuel gauge indicator mechanism	
7 a Relay for signal horn	
7 b Relay for signal light *	
8 Fuse box	
9 Windshield wiper motor	
10 Interior light *	6 V — 5 W
11 Door contact switch *	
12 Trouble light socket	
13 Stop light switch	
14 Back-up light switch	
15 Cigarette lighter *	
16 Blinker switch	
17 Blinker indicator mechanism	
18 Light signal push button (steering wheel) *	
19 Signal horn ring (steering wheel) *	
20 Light switch	
21 Foot operated dip switch	
22 Ignition switch	
23 Speedometer	6 V — 0,6 W
24 Tachometer	6 V — 0,6 W
25 Combination instrument; oil temperature gauge and fuel gauge	6 V — 1,2 W
26 Oil pressure switch	
27 Oil temperature gauge element	
28 Ignition coil	
29 Regulator and cut-out switch	
30 Solenoid switch for starter	
31 Spark plugs	
32 Distributor	
33 Generator	
34 Starter	
35 Stop blinker light	6 V — 15 W
36 Tail light	6 V — 5 W
37 Licence plate light and back-up light	6 V — 10 W — 25 W

\* not supplied for Speedster